


STATESMAN

kitchen appliances

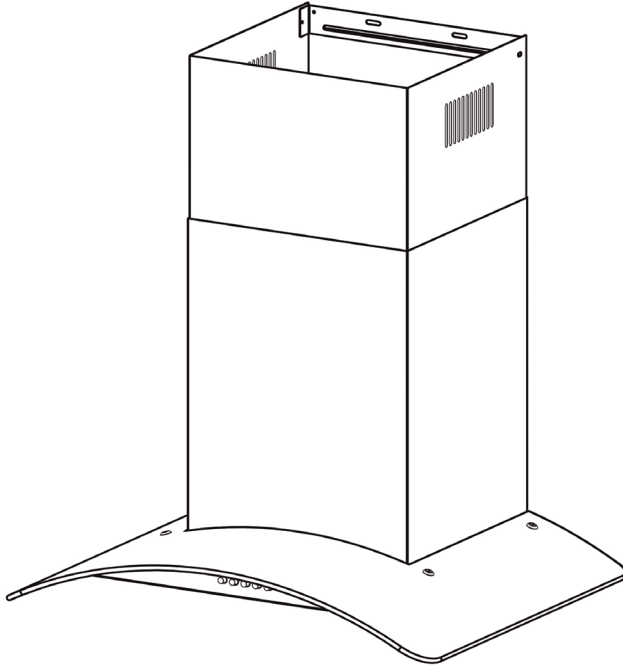

CGH160GS
CHIMNEY HOOD STAINLESS STEEL
CURVED GLASS

Instruction Manual

PO number:

Please read these instructions carefully before use and retain for future reference.
Before switching on your appliance – Always check for any damage that may have been caused in transit.

CONTENTS

Safety Instructions.....	3-5
Appliance Overview.....	5-6
Installation	7-10
Operating Instructions.....	11
Cleaning and Maintenance.....	12-13
Fuse Replacement	13
Troubleshooting.....	14
Service & Disposal Information	15

IMPORTANT SAFETY INSTRUCTIONS

Please ensure you read all instructions and warnings in this user guide prior to first use.

Keep this user guide for future reference.

- The installation and repair work must be undertaken by a qualified and competent person.
- The manufacturer disclaims all liability for any damage or injury caused as a result of not following the instructions of installation.
- The cooker hood supply should be 220V-240V~50Hz
- Children less than 8 years of age shall be kept away unless continuously supervised.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Cleaning and user maintenance shall not be made by children without supervision.
- When the hood is in repair, maintenance, replacement of parts, please pull out the plug to ensure the safety of people.
- Plug the power chord into the power socket outlet with earthing continuity terminal.
- The cooker hood is for home use only, not suitable for barbecue commercial purposes.
- The cooker hood and its filter mesh should be cleaned regularly according to the instructions.
- Do not use open flame, or allow oil to go beneath the

appliance.


- Do not check that status of the filters whilst the cooker hood is operating.
- Do not touch the light bulb within half an hour after appliance is used.
- If any fault occurs with the appliance, please call after-sale service department.
- Please keep the kitchen well ventilated when in use.
- Prior to any maintenance or cleaning, ensure the power is off.
- Constantly check food frying to avoid the overheating of oil which may become a fire hazard.
- If the supply chord is damaged, it must be replaced by the manufacturer, service agent or similarly qualified person in order to avoid a hazard. The replaced power cord should be provided by manufacturer or seller.
- If the plug or cord is damaged, please call after-sale service centre.
- There is a fire risk if cleaning is not carried out in accordance with the instructions.
- In case of a damaged connecting wire, please refer to the manufacturer, after-sale service personnel or other qualified technicians.
- Use the unit according to the instructions to avoid fire hazard.
- There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels.
- There is a fire risk if cleaning is not carried out in accordance with the instructions.
- Do not flambé under the range hood
- The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels.
- To protect the main body from corrosion of the long term accumulation of dirt, the cooker hood should be cleaned with

hot water & non-corrosive detergent every 2 months.





CAUTION: Accessible parts may become hot when used with a cooking appliance

APPLIANCE OVERVIEW

No.	Qty.	Component
1.	X1	Hood Body, complete with: Controls, Light, Blower, Filter.
2a.	X1	Lower Decorative Chimney
2b.	X1	Upper Decorative Chimney
3.	X1	Flange (optional)
4.	X1	Exhaust Pipe
5.	X2	The Activated Charcoal filter (optional)
6.	X7	Screws 5 x 50
7.	X7	Wall Plugs
8.	X6	Screws 4.2 x 9.5
9.	X2	Chimney fixing bracket


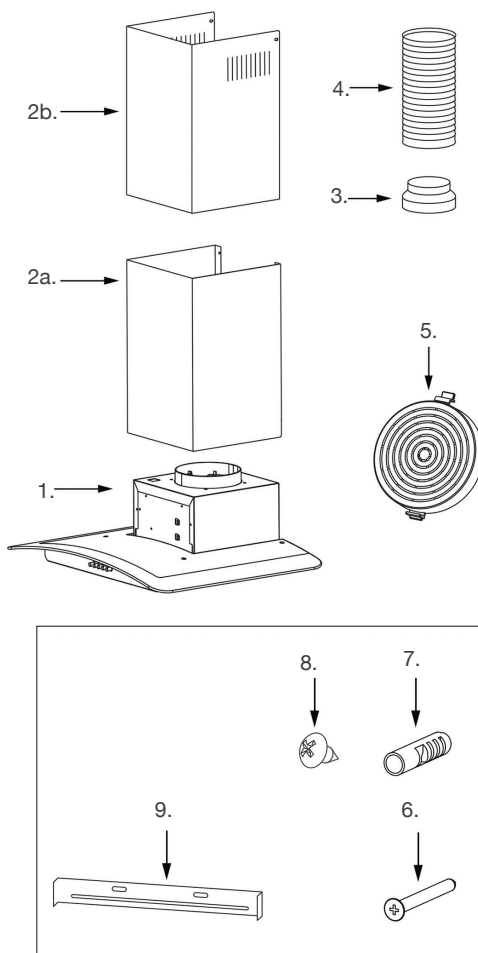


Dimensions (mm)

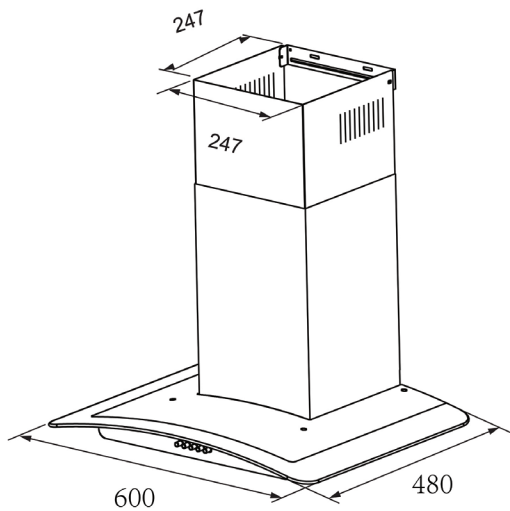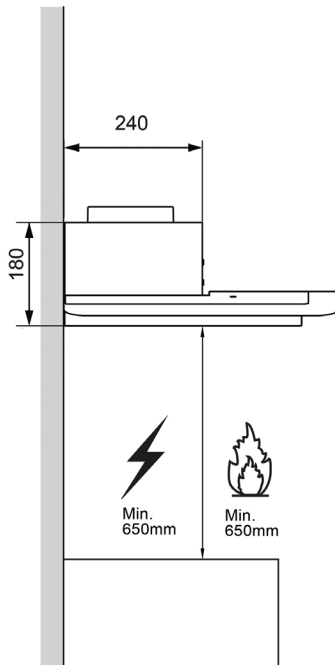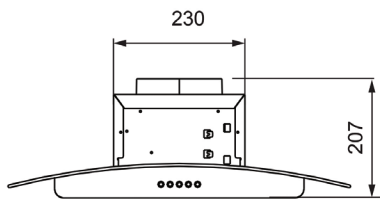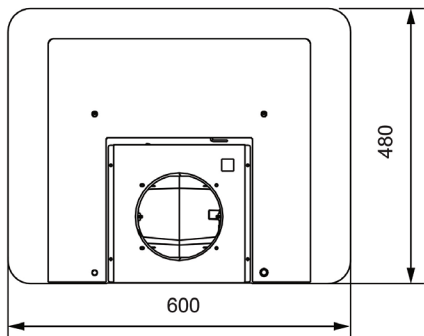

INSTALLATON

Wall Drilling and Bracket Fixing

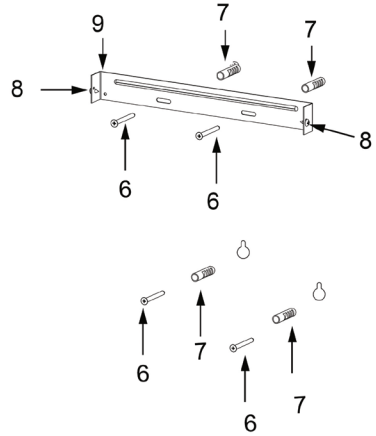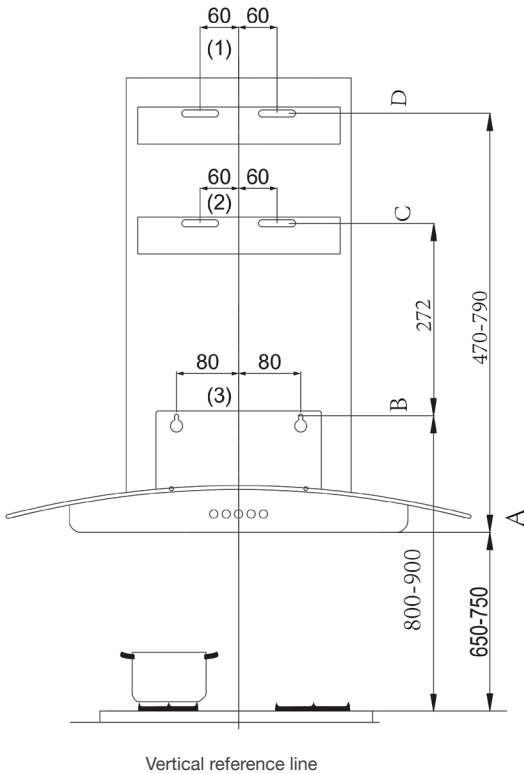

As a first step, proceed with the following drawings:

- A vertical line up to the ceiling or up to the upper limit, at the center of the area in which the hood is to be fitted.
- The cooker hood should be placed 650-750mm (horizontal line A) up from the cooking plane for safe and a good effect.
- A horizontal line B at a minimum 800-900mm above the cooker top.
- A horizontal line C at a 272 mm above the B.
- A horizontal line D at 470-790mm above the cooker hood.

Mark Points:

- Mark a point (1) on the horizontal line D, 60mm to the vertical reference line.
- Repeat this operation on the other side, checking that the three marks are leveled.


- Mark a point (2) on the horizontal line C, 60 mm to the vertical reference line.
- Repeat this operation on the other side, checking that the three marks are leveled.
- Mark a point (3) on the horizontal line B, 80 mm to the vertical reference line.
- Repeat this operation on the other side, checking that the three marks are leveled.

Fix the brackets:

- Drill holes at the marked points with a 10 mm drill bit. Insert the
- Wall Plugs into the holes.
- Fix the Screws (5 x 50) bracket 6 with X2 screws supplied with the hood at the horizontal line B.
- Chimney fixing bracket 9 with X2 screws 6 (ST5x50) supplied with the hood at the horizontal line D.




Fix lower decorative chimney:

- Fix the exhaust pipe on the hood body.
- Connect chimney and hood body with X2 screws 8.
- Connect chimney fixing bracket 9 and chimney with X2 screws 8.

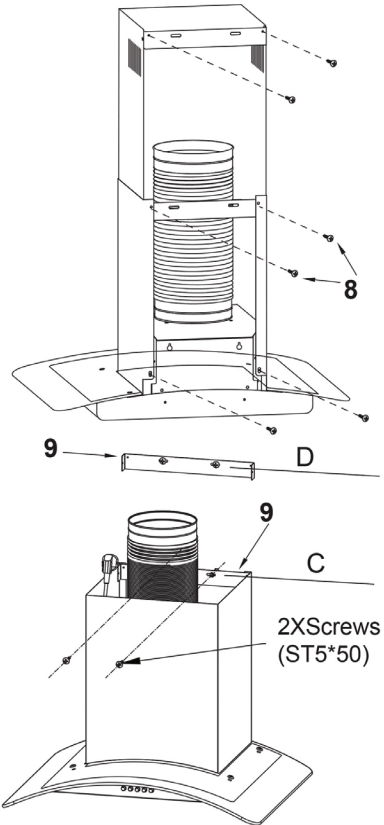

Hook the hood body

- To mount on the wall, drill two 10mm.
- Insert two plastics wall plugs (supplied) into the holes.
- Insert two screws (ST5*50) 6 into the upper two plastic wall plugs, and tighten them leaving 3mm, protruding from the Wall.
- Mount the hood on the top screws, Insert the bottom screws and fully tighten all the screws.

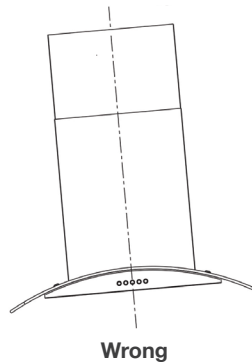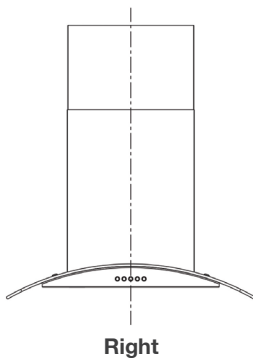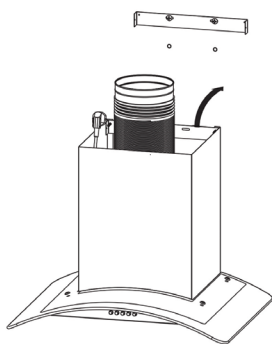


Connections

DUCTED VERSION AIR EXHAUST SYSTEM

When installing the ducted version, connect the hood to the chimney using either a flexible or rigid pipe ϕ 150 or ϕ 120mm, the choice of which is left to the installer.


- If to install a ϕ 120 mm air exhaust connection, insert the reducer flange 3 on the hood body outlet.
- Fix the pipe 4 in position using sufficient pipe clamps (not supplied).
- Remove possible charcoal filters.

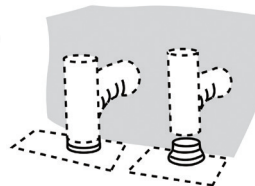

Chimney Assembly



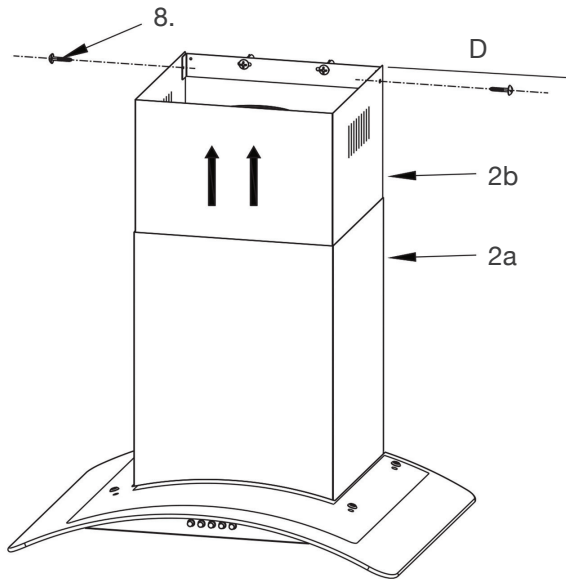


Upper Decorative Chimney

- Insert the upper decorative chimney 2b into the lower decorative chimney 2a and drag it up to the horizontal line D.
- Connect upper decorative chimney 2b and chimney fixing bracket 9 with X2 screws 8.



OPERATING INSTRUCTIONS




	OFF MOTOR SWITCH: Press on this switch to stop the motor operation.
	SPEED SWITCH: Press on this switch, the motor runs at LOW speed.
	SPEED SWITCH: Press on this switch, the motor runs at MEDIUM speed.
	SPEED SWITCH: Press on this switch, the motor runs at HIGH speed.
	ON/OFF LIGHTING SWITCH: Press on this switch to turn on the lights, and press again to turn them off.

CLEANING & MAINTENANCE

Grease Filters:

Cleaning Metal Self-Supporting Grease Filters

- The filters must be cleaned every 2 months of operation, or more frequently for particularly heavy usage, and can be washed in a dishwasher.
- Pull the comfort panels to open them.
- Remove the filters one by one pushing them towards the back side of the hood unit and simultaneously pulling downwards.
- Any kind of bending of the filters has to be avoided when washing them. Before fitting them again into the hood make sure that they are completely dry. (The color of the filter surface may change throughout the time but this has no influence to the filter efficiency).
- When fitting the filters into the hood pay attention that they are mounted in correct position the handle facing outwards.

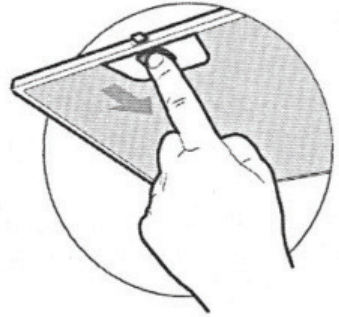


Activated Charcoal Filter (Recirculation Version)

These filters are not washable and cannot be regenerated, and must be replaced approximately every 4 months of operation, or more frequently with heavy usage.

Replacing The Activated Charcoal Filter


- Remove the metal grease filters
- Remove the saturated activated charcoal filter.
- Fit the new filters.
- Replace the metal grease filters.

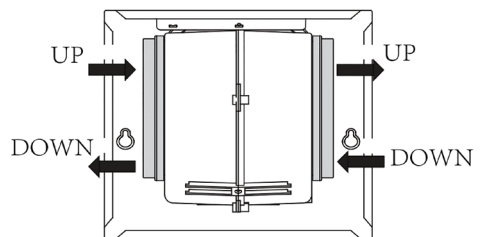


Bulb Replacement

Disconnect the power supply before replacing the light modules




Loosen Screw

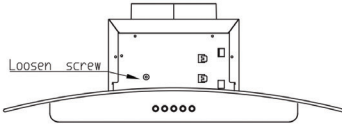


Take out the junction box

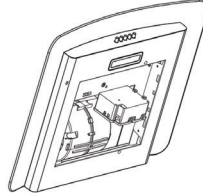


Take out Led

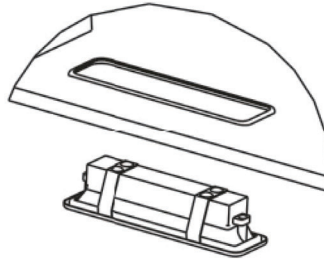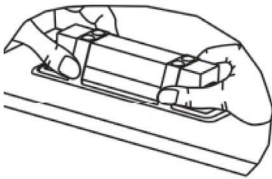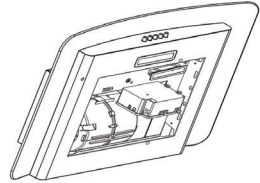

	Max Power	Voltage	Picture	Lamp Cap	ILCOS D code
Self-ballasted LED modules	1.5W	220-240V~	 Square / Diameter : 33.2mm x 120mm	--	DBS-1.5- H-33.2/120

MAINS PLUG FUSE REPLACEMENT

Earth (green/yellow)

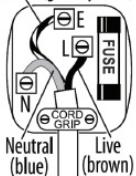

Fuse Replacement (Class I)

This appliance must be earthed. Remove the central screw on the plug and open the shell. Take out the fuse and replace with a new fuse of the same Amp. Install the shell again and tighten the screws.

TROUBLESHOOTING

If you are having problems with your appliance, please use our troubleshooting guide below. If you are unable to resolve the issue using this guide please ring our Customer Service Department on 0844 848 5861. Please have the model code and purchase information available.

Note: Any repairs should be done by a qualified technician.

Fault	Cause	Solution
Light on, but motor does not work	The blades are blocked	Remove blockage
	The capacitor is damaged	Replace capacitor
	The motor is damaged	Replace motor
	The internal wiring of motor is cut off/disconnected. An unpleasant smell may produce	Replace motor
Both light and motor do not work	Apart from the above mentioned, check the following:	
	Light damaged	Replace lights
	Power cord loose	Connect the wires as per the electrical diagram
Vibration	The blade, if damaged, can cause vibrating	Replace the blade
	The motor is not tightly fastened	Fasten the motor tightly
	The cooker hood is not tightly fixed	Fix the cooker hood tightly
Insufficient Suction	The distance between the cooker and the cooker top is too large	Readjust the distance
	Too much ventilation from open doors or windows	Choose a new place to install the appliance or close some doors/windows
The machine inclines	The fixing screws are not tight enough	Tighten the fixing screw and make it horizontal
	The hanging screws are not tight enough	Tighten the hanging screw and make it horizontal

Disposal of Old Electrical Appliances



The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste.

Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

SERVICE AND SPARE PARTS

Should you experience any difficulty in using your Statesman appliance at any time, you may contact your Statesman Retailer or call our Customer Service Department on:

01473 277 508

Please have the following details ready;

- Model Name / Model Number
- Serial Number
- Date of Purchase
- Where Purchased
- Customer Name and Address including Post Code
- Contact Telephone Number
- Accurate description of the fault

Spare Parts information can be obtained by calling our Spare Parts Department on:

01473 277 508

Disclaimer: Updates to hardware components are made regularly. Therefore some of the instructions, specifications and pictures in this documentation may differ slightly from your particular situation. All items described in this guide are for illustration purposes only and may not apply to your particular situation. No legal right or entitlements may be obtained from the description made in this manual.

STATESMAN

kitchen appliances

UK Address: 38 Bluestem Road, Ransomes Europark, Ipswich, IP3 9RR

EU Address: Castle Electrical Factors Ltd., Dundalk, A91 KA9R, IR

01473 277 508