


STATESMAN

kitchen appliances

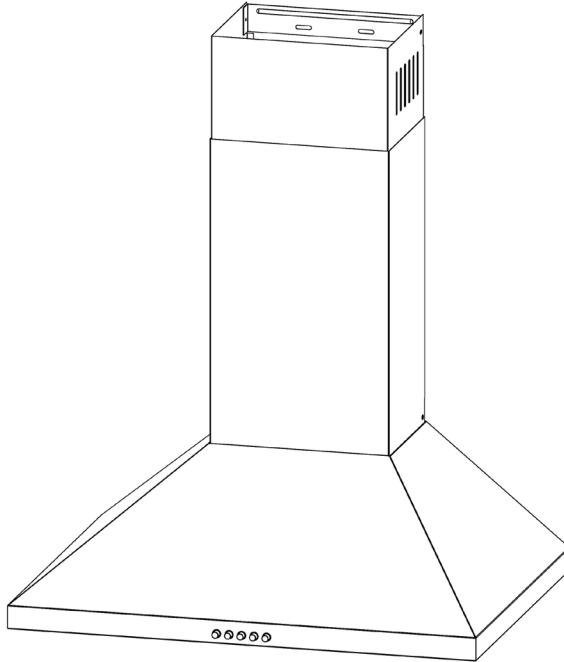

CHM160SS
60CM CHIMNEY COOKER HOOD
STAINLESS STEEL

Instruction Manual

Please read these instructions carefully before use and retain for future reference.
Before switching on your appliance – Always check for any damage that may have been caused in transit.

CONTENTS

| | |
|-------------------------------------|-------|
| Important Safety Instructions | 3-4 |
| Appliance Overview..... | 5-6 |
| Installation | 7-10 |
| Operating Instructions..... | 10 |
| Cleaning and Maintenance..... | 11-12 |
| Troubleshooting..... | 13 |
| Fuse Replacement | 14 |
| Disposal Information | 14 |
| Statesman Warranty Information..... | 15 |

IMPORTANT SAFETY INSTRUCTIONS

Please ensure you read all instructions and warnings in this user guide prior to first use.

Keep this user guide for future reference.



- The installation and repair work must be undertaken by a qualified and competent person.
- The manufacturer disclaims all liability for any damage or injury caused as a result of not following the instructions of installation.
- The cooker hood supply should be 220V-240V~50Hz.
- Children less than 8 years of age shall be kept away unless continuously supervised.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Cleaning and user maintenance shall not be made by children without supervision.
- When the hood is in repair, maintenance, replacement of parts, please pull out the plug to ensure the safety of people.
- Plug the power cord into the power socket outlet with earthing continuity terminal.
- The cooker hood is for home use only, not suitable for commercial purposes.
- The cooker hood and its filter mesh should be cleaned regularly according to the instructions.
- Do not use open flame, or allow oil to go beneath the appliance.
- Do not check the status of the filters whilst the cooker hood is operating.
- Do not touch the light bulb within half an hour after appliance is used.

- If any fault occurs with the appliance, please call after-sale service department.
- Please keep the kitchen well ventilated when in use.
- Prior to any maintenance or cleaning, ensure the power is off.
- Constantly check food frying to avoid the overheating of oil which may become a fire hazard.
- If the power cord is damaged, it must be replaced by the manufacturer, service agent or similarly qualified person in order to avoid a hazard.
- If the plug or cord is damaged, please call after-sale service centre.
- There is a fire risk if cleaning is not carried out in accordance with the instructions.
- In case of a damaged connecting wire, please refer to the manufacturer, after-sale service personnel or other qualified technicians.
- Use the unit according to the instructions to avoid fire hazard.
- There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels.
- There is a fire risk if cleaning is not carried out in accordance with the instructions.
- Do not flambé under the range hood.
- The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels.
- To protect the main body from corrosion of the long term accumulation of dirt, the cooker hood should be cleaned with hot water & non-corrosive detergent every 2 months.





CAUTION: Accessible parts may become hot when used with a cooking appliance.

APPLIANCE OVERVIEW

| No. | Qty. | Component |
|-----|------|------------------------------------------------------------|
| 1. | X1 | Hood Body, complete with: Controls, Light, Blower, Filter. |
| 2a. | X1 | Lower Decorative Chimney |
| 2b. | X1 | Upper Decorative Chimney |
| 3. | X1 | Flange (optional) |
| 4. | X2 | The Activated Charcoal filter (optional) |
| 5. | X7 | Screws 5 x 50 |
| 6. | X7 | Wall Plugs |
| 7. | X6 | Screws 4,2 x 9,5 / Screws 4 x 8 |
| 8. | X1 | Chimney fixing bracket |

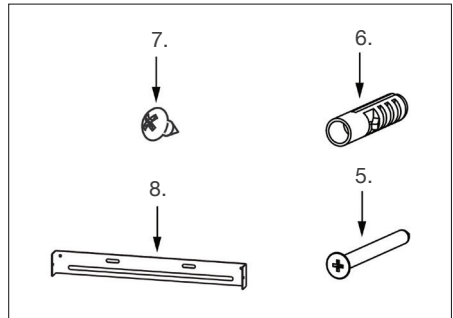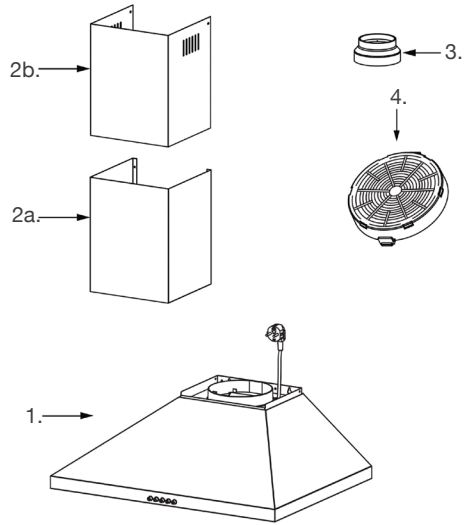



Dimensions (mm)

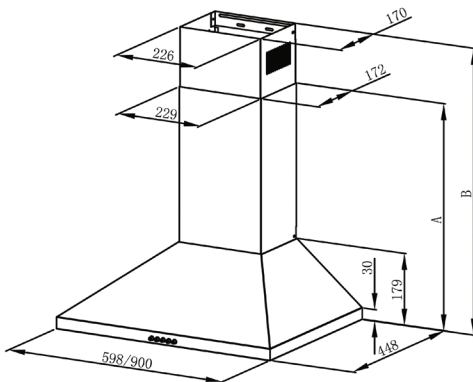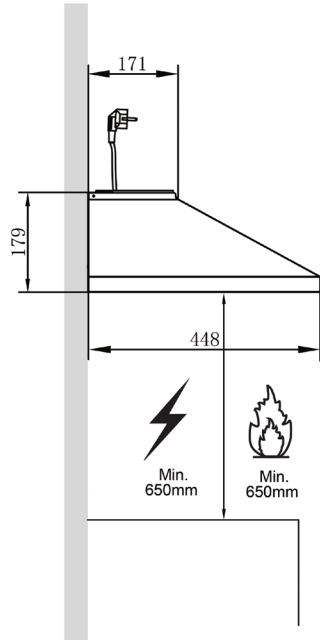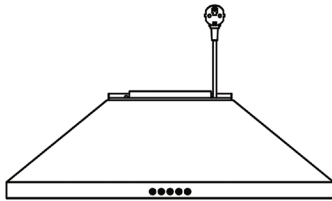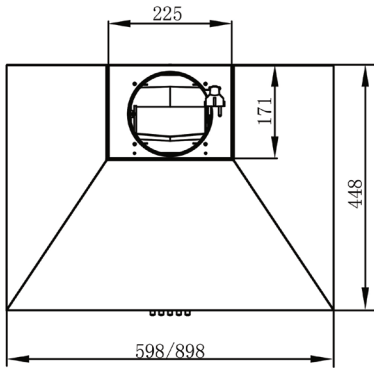

| Option | Chimney | A | B |
|--------|---------|-----|---------|
| 1 | 400+0 | 569 | / |
| 2 | 400+300 | 569 | 610-850 |
| 3 | 400+390 | 569 | 610-940 |

INSTALLATON

 Wall Drilling and Bracket Fixing

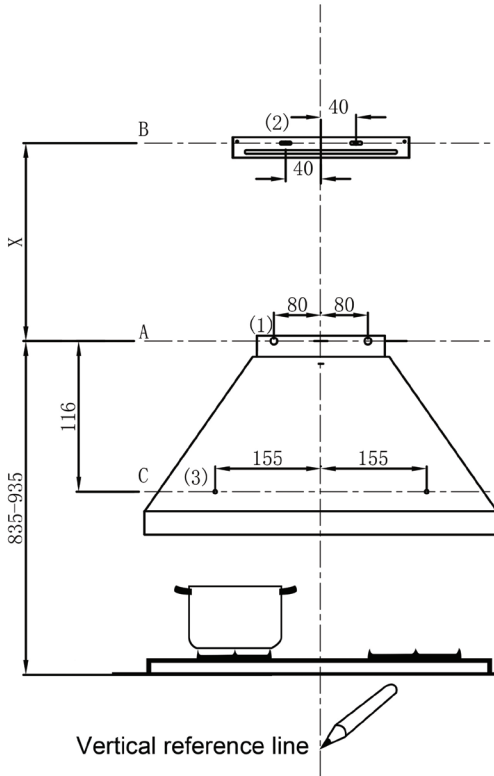

| Option | Chimney | X |
|--------|---------|---------|
| 1 | 400+0 | / |
| 2 | 400+300 | 410-650 |
| 3 | 400+390 | 410-740 |

As a first step, proceed with the following drawings:

- A vertical line up to the ceiling or up to the upper limit, at the center of the area in which the hood is to be fitted.
- A horizontal line A at 835-935 mm above the cooker top.
- A horizontal line B at a X mm above the horizontal line A.
- A horizontal line C at a 116mm below the horizontal line A.

Mark Points:

- Mark a point (1) on the horizontal line A, 80mm to the vertical reference line.
- Repeat this operation on the other side, checking that the two marks are leveled.
- Mark a point (2) on the horizontal line B, 40mm to the vertical reference line.
- Repeat this operation on the other side, checking that the two marks are leveled.
- Mark a point (3) on the horizontal line C, 155mm to the vertical reference line.
- Repeat this operation on the other side, checking that the two marks are leveled.


Fix the brackets (Optional):

- Drill holes at the marked points with a $\phi 10$ mm drill bit.
- Insert the Wall Plugs 6 into the holes.
- Screw 2 screws 5 (5 x 50) to Wall Plugs 6 at the horizontal line A; approximately the four fifth length of the screws 5 (5 x 50) was screwed into the Wall Plugs 6, used for hook the hood.
- Fix a Chimney fixing bracket 21 with 2 screws 5 (5 x 50) at the horizontal line B.


Hook the hood body

Hook the hood body to the 2 screws 5 (5 x 50) at the horizontal line A. Level the hood body itself.

Remove the filter from the inside of the hood body, fix the screws 5 to Wall Plugs 6 at the points (3).

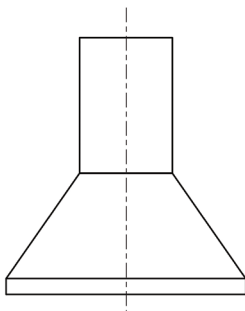

Right

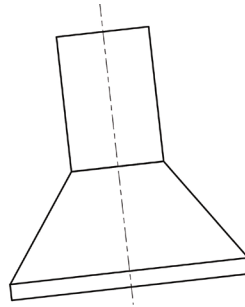


Wrong

Connections

DUCTED VERSION AIR EXHAUST SYSTEM

When installing the ducted version, connect the hood to the chimney using either a flexible or rigid pipe ϕ 150 or ϕ 120mm, the choice of which is left to the installer.

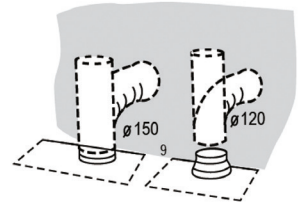


- If to install a ϕ 120mm air exhaust connection, insert the reducer flange 3 on the hood body outlet.
- Fix the pipe 4 in position using sufficient pipe clamps (not supplied).
- Remove possible charcoal filters.

Chimney Assembly

The chimney can only be installed with exhausting hood.


Lower Decorative Chimney

- Fix the Lower Decorative Chimney to the hood body with 2 screws 12 (4.2 x 9.5) supplied with the hood.

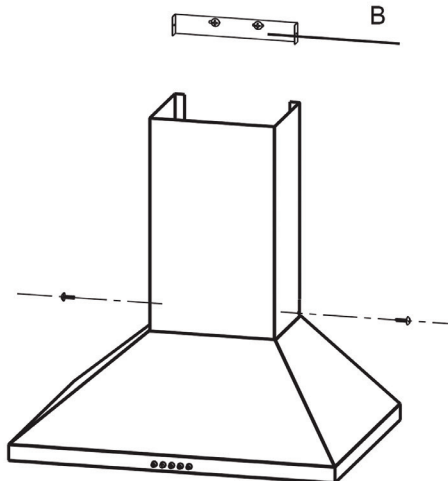



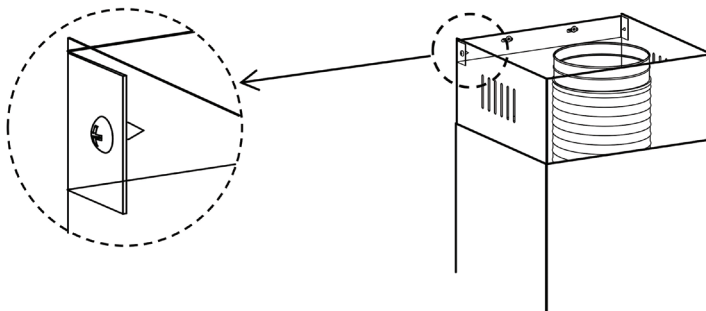


Upper Decorative Chimney

- Fix the upper chimney onto the bracket 21 with 2 screws 12 (4.2 x 9.5) supplied with the hood.



OPERATING INSTRUCTIONS




| | |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|
|  | OFF MOTOR SWITCH: Press on this switch to stop the motor operation. |
|  | SPEED SWITCH: Press on this switch, the motor runs at LOW speed. |
|  | SPEED SWITCH: Press on this switch, the motor runs at MEDIUM speed. |
|  | SPEED SWITCH: Press on this switch, the motor runs at HIGH speed. |
|  | ON/OFF LIGHTING SWITCH: Press on this switch to turn on the lights, and press again to turn them off. |

CLEANING & MAINTENANCE

Grease Filters:

Cleaning Metal Self-Supporting Grease Filters

- The filters must be cleaned every 2 months of operation, or more frequently for particularly heavy usage, and can be washed in a dishwasher.
- Remove the filters one by one pushing them towards the back side of the hood unit and simultaneously pulling downwards.
- Any kind of bending of the filters has to be avoided when washing them. Before fitting them again into the hood make sure that they are completely dry. (The color of the filter surface may change throughout the time but this has no influence to the filter efficiency).
- When fitting the filters into the hood pay attention that they are mounted in correct position, the handle facing outwards.

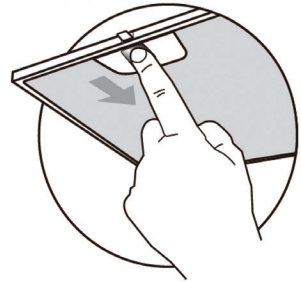


Activated Charcoal Filter (Recirculation Version)

These filters are not washable and cannot be regenerated, and must be replaced approximately every 4 months of operation, or more frequently with heavy usage.

Replacing The Activated Charcoal Filter


- Remove the metal grease filters
- Remove the saturated activated charcoal filter.
- Fit the new filters.
- Replace the metal grease filters.

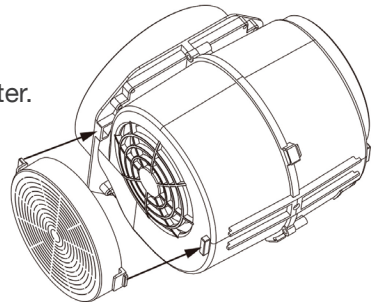


Bulb Replacement

Disconnect the power supply before replacing the light modules

- Remove the grease filter.
- Remove the light by levering its fitting from the hood body (this may require pressure or force to be applied).
- Disconnect the connector of the light.
- Replace the light with a new one of the same type, making sure that you connect the light with the light cable correctly.
- Reconnect the power by inserting the mains plug or by switching on the fuse.

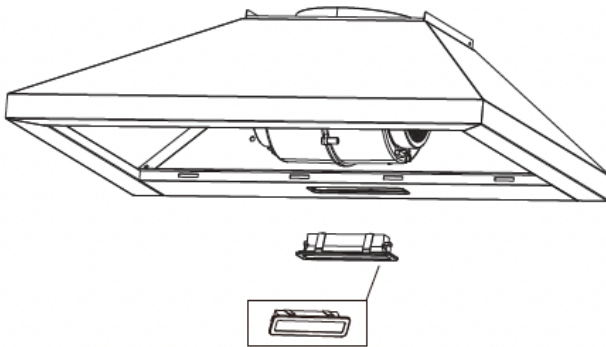

| | Max Power | Voltage | Picture | Lamp Cap | ILCOS D code |
|----------------------------|-----------|-----------|-----------------------------------------------------------------------------------------------------------------------------|----------|------------------------|
| Self-ballasted LED modules | 1.5W | 220-240V~ |  Square / Diameter : 33.2mm x 120mm | -- | DBS-1.5- H-33.2/120 |

TROUBLESHOOTING


If you are having problems with your appliance, please use our troubleshooting guide below. If you are unable to resolve the issue using this guide please ring our Customer Service Department on 0844 848 5861. Please have the model code and purchase information available.

Note: Any repairs should be done by a qualified technician.

| Fault | Cause | Solution |
|-----------------------------------|--------------------------------------------------------------------------------------------|-------------------------------------------------------------------------|
| Light on, but motor does not work | The blades are blocked | Remove blockage |
| | The capacitor is damaged | Replace capacitor |
| | The motor is damaged | Replace motor |
| | The internal wiring of motor is cut off/disconnected. An unpleasant smell may be produced. | Replace motor |
| Both light and motor do not work | Apart from the above mentioned, check the following: | |
| | Light damaged | Replace lights |
| | Power cord loose | Connect the wires as per the electrical diagram |
| Vibration | The blade, if damaged, can cause vibrating | Replace the blade |
| | The motor is not tightly fastened | Fasten the motor tightly |
| | The cooker hood is not tightly fixed | Fix the cooker hood tightly |
| Insufficient Suction | The distance between the cooker and the cooker top is too large | Readjust the distance |
| | Too much ventilation from open doors or windows | Choose a new place to install the appliance or close some doors/windows |
| The machine inclines | The fixing screws are not tight enough | Tighten the fixing screw and make it horizontal |
| | The hanging screws are not tight enough | Tighten the hanging screw and make it horizontal |

FUSE REPLACEMENT (CLASS I)

This appliance must be earthed. Remove the fuse cover with a small flat head screw driver. Take out the fuse and replace with a new fuse of the same Amp. Replace the fuse cover and push back into place.

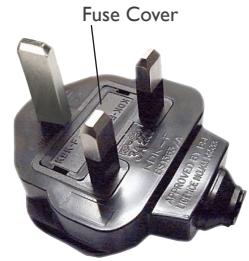

DISPOSAL INFORMATION

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste.

Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.



STATESMAN WARRANTY/GUARANTEE TERMS & CONDITIONS

THANK YOU FOR CHOOSING STATESMAN

To help protect your product, we want to give you an additional 12 months warranty. If you register your appliance within 30 days of purchase, we will activate your additional 12 months warranty, giving you **24 months peace of mind**. This means that in the unlikely event you develop a fault or problem with your product we will happily repair or replace the item free of charge. To qualify for the guarantee, the product must be used for domestic household use only and in accordance with the instructions in the user manual. Any misuse of the product will result in the warranty being void. The guarantee does not cover accidental damage, misuse, neglect, tampering or incorrect adjustment or installation. The guarantee will be rendered invalid if the product is resold, has had its serial number or rating label removed (or has an invalid serial number or rating label), or if an unauthorised person has carried out any repairs or alterations.

You can instantly activate your 24 month warranty by visiting www.statesman.warrantyonline.co.uk. Once your registration has been processed you will receive confirmation of your warranty.

The warranty does not cover accessories or consumable parts that require replacement under normal use. This includes shelving, dials, filters, belts and trays etc. In the unlikely event of a breakdown please refer to the Troubleshooting Guide in your user manual and check all plugs, fuses and the electricity supply. If you still require assistance, please contact our Customer Service Department on **01473 277 508** or write to us at the following address:

Customer Service Department:

38 Bluestem Road, Ransomes Industrial Estate, Ipswich, IP3 9RR.

Please quote the Product Code and the PO number on the rating label and give details of the exact fault. We will then decide whether to replace the item.

IMPORTANT NOTE: Before we arrange the replacement, you will be required to return a copy of your proof of purchase. Please retain your original receipt. If an item is replaced within the agreed warranty period, the warranty for the replacement item will be calculated from the purchase date of the original.

If the product is inspected, and no fault is found, or the product is not within the guarantee period you will be charged for the repair and any carriage costs.

STATESMAN

kitchen appliances

UK Address: 38 Bluestem Road, Ransomes Europark, Ipswich, IP3 9RR

EU Address: Castle Electrical Factors Ltd., Dundalk, A91 KA9R, IR

01473 277 508