

STATESMAN

kitchen appliances



TD03VFW
3KG COMPACT VENTED TUMBLE DRYER WHITE

Instruction Manual


**Please read these instructions carefully before use and retain for future reference.
Before switching on your appliance – Always check for any damage that may have
been caused in transit.**

CONTENTS

Important Safety Instructions	3-4
Product Specification	5
Appliance Overview.....	6
Installation.....	7
Operating Instructions	8-10
Cleaning & Maintenance.....	11
Troubleshooting Guide.....	12
Mains Plug Fuse Replacement.....	13
Disposal Information.....	14
Statesman Warranty Information.....	15

IMPORTANT SAFETY INSTRUCTIONS

Read and follow all of the instructions even if you feel you are familiar with the product, and find a place to keep this manual handy for future reference.


 **WARNING!** This product is intended for domestic use only. When using electrical appliances, basic safety precautions should always be followed:


- Do not operate the appliance with a damaged cord or plug, after it malfunctions or has been dropped or damaged in any way. All electrical repairs must be carried out by a qualified electrician.
- Check the voltage of the appliance matches the household voltage, which is located on the rating label.
- Use of an extension cord is not recommended with this product.
- Children should be supervised to ensure that they don't play with the appliance.
- Cleaning and user maintenance shall not be made by children.
- Keep the appliance and its cord out of the reach of children.
- This appliance can be used by children from 8 years of age and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children less than 3 years of age should be continuously supervised around the appliance.
- Keep all packaging well away from children as there is a risk of suffocation.
- Always unplug the appliance before attempting to move. When disconnecting from the electricity supply, pull the plug and not the cord.
- This product is for indoor use only.
- When positioning the appliance, ensure the supply cord and/or plug are not trapped or damaged behind the appliance. A squashed or damaged supply cord or plug may overheat and cause a fire.
- Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- Do not lean on the opened door of the dryer.
- Do not exceed the rated load for this appliance.
- Do not operate the dryer without the door filter.
- Do not dry clothes before being spun.
- Do not expose the dryer to any heat source like radiators, heaters, air ducts or direct sunlight.
- Do not place a naked flame source, such as a candle near or on the appliance.
- Do not place items inside the dryer that have been soiled with flammable liquids without washing them with detergent thoroughly beforehand.
- Do not run the cord under floor coverings. Instead, arrange the cord away from traffic areas where it will not become a trip hazard.
- Do not install the dryer in a humid environment.
- The appliance should not be overturned during normal use or maintenance.
- Items such as foam, shower caps, waterproof materials, rubber backed items should not


be dried in the tumble dryer.


- Fabric softeners or similar products should be used as specified by the fabric softener instructions.

WARNING! Risk of child entrapment. Always close the door after use to avoid children or pets climbing inside or hiding things inside the dryer.

 **WARNING!** Risk of fire/flammable materials.

 **WARNING!** Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

 **WARNING!** Oil stained items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items could become hot enough to catch fire.

 
 **WARNING!** The drying capacity is the maximum capacity that can be dried at one time. Do not install the tumble dryer in a room where there is a risk of frost. At temperatures around freezing point the tumble dryer may not be able to operate.



PRODUCT SPECIFICATION


Model:	TD03VFW
Product Dimensions (mm):	H:690 x W:490 x D:475
Product Weight:	20.5kg
Drying Capacity:	3kg
Energy Consumption:	243kW/h
Noise Level:	50dB
Energy Rating:	C
Rated Voltage:	220-240V
Rated Input Power:	1020W
Rated Frequency:	50-60Hz

APPLIANCE OVERVIEW

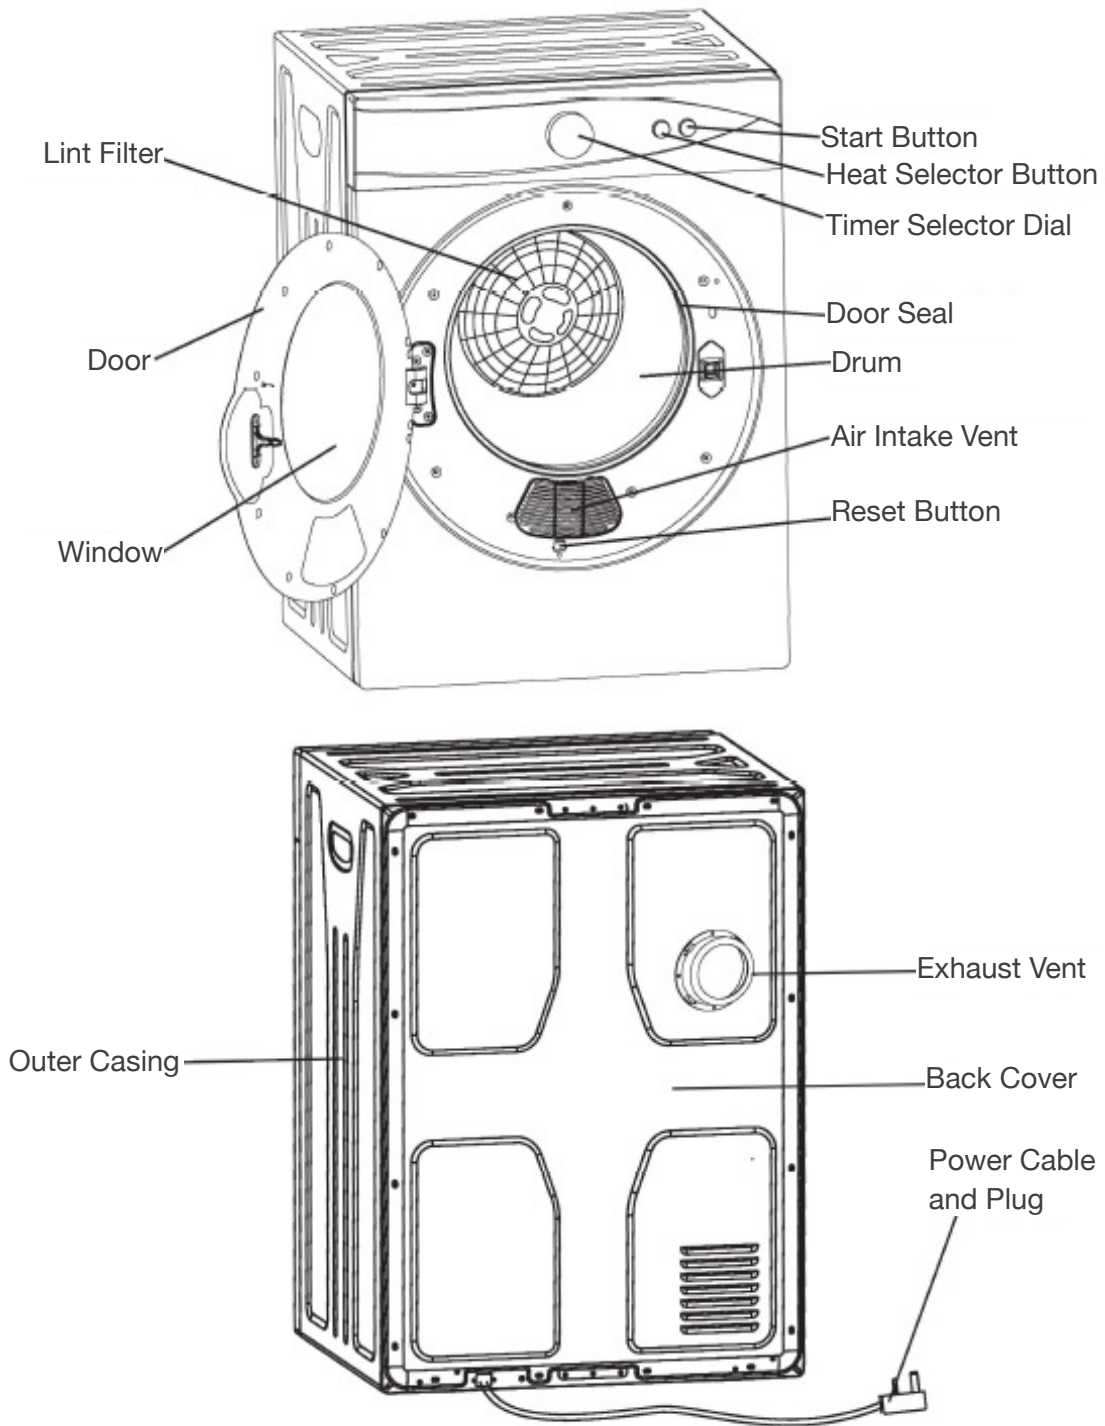

INSTALLATION


- The appliance must stand vertically on a flat, even surface. It is not recommended to stand the appliance on a carpeted surface.
- Do not restrict the floor clearance with thick carpet or other objects, as this might cause heat to build up which could interfere with the operation of the appliance or cause a fire.
- Before use, all packing materials should be removed.
- Do not expose the appliance to damp conditions, open air, or rain.
- Do not install the dryer in a room where there is a risk of frost.
- Place the tumble dryer in a dry well-ventilated area.
- Position the dryer away from heat and direct sunlight.
- There should be at least 15cm between the dryer and the walls.
- Do not lift the appliance by the door when moving.
- It is not recommended to place the appliance in a wall recess, fitted cabinet or furniture, as this will not allow adequate ventilation and could be a potential fire hazard.
- The tumble dryer must be installed in a clean place, where dirt does not accumulate. Air must be able to circulate freely around the appliance. Ensure that vents are not covered.
- The tumble dryer must be installed in a clean place, where dirt does not accumulate. Air must be able to circulate freely around the appliance.
- To keep vibration and noise to a minimum level when the dryer is in use, it must be placed on a firm and level surface.
- The dryer comes with fixed feet that need to be assembled to ensure stability.

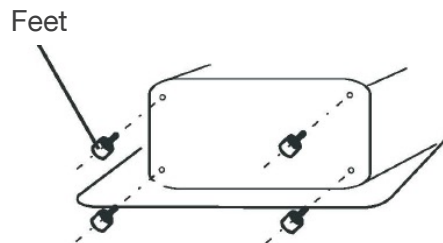

Connecting the Exhaust Hose

- Install the Exhaust Connector. Adjust the direction to suit the installation (as per Fig. 2).
- Rotate the Connector clockwise to fix the pipe to the Connector Base and tighten.

Fig. 2 Connector base Exhaust connector


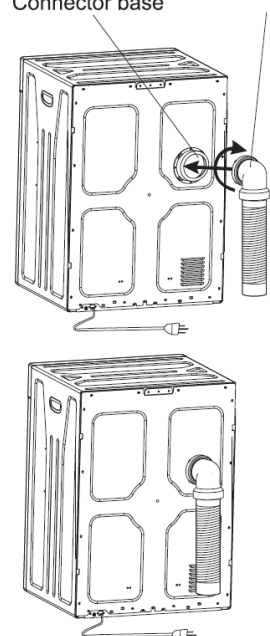


OPERATING INSTRUCTIONS





Plug the power cord into a power socket.

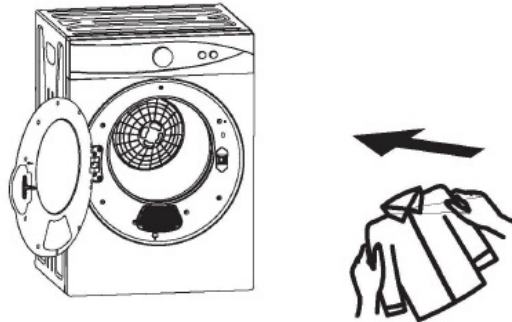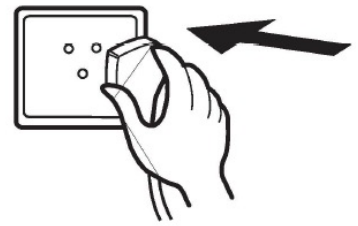Loading the Dryer:

It is recommended that items are placed into the dryer one at a time. This ensures they are not tangled which results in uneven drying. When closing the door prior to starting the dryer ensure that items are not jammed in the door.



Only dry laundry for tumble drying. Please see below for laundry care labels:

-  Suitable for tumble drying.
-  Normal temperature drying process: Drying in the tumble dryer is possible under normal load and temperature 80°.
-  Low temperature drying process: Caution is needed when tumble drying. Select low temperature.
-  Do not tumble dry items unsuitable for drying in the tumble dryer.

Before first use, take a soft cloth and clean the inside of the drum.

- Before drying, thoroughly spin the laundry in the washing machine, this shortens the drying time and saves energy.
- Check the items to be dried do not have combustible materials or foreign objects in the pockets.
- Do not over dry the clothes.
- Do not dry items containing rubber or similar elastic materials.
- Turn items with zippers inside out and fasten buckles, buttons etc.
- Dryer heat may permanently set stains, ensure you check prior to drying that stains are removed.
- Separate dark and light-coloured items as you would when washing.
- For best results load the dryer with similar fabrics.
- Place small delicate items in a mesh bag and do not overload the dryer.
- The maximum load is 3kg of dry materials.

Drying Time Reference Table


Drying Capacity	Dry Time
Approx. 1kg	Approx. 60 min
Approx. 2kg	Approx. 90min
Approx. 2.5kg	Approx. 150min
Approx. 3kg	Approx. 200min

Drying times can be affected by many factors, such as material, bulkiness, how full the dryer is etc. The above list is only a guide.

CONTROL PANEL FUNCTIONS

Heat Setting Button

Select 'High Dry' for items that are particularly bulky or large quantities. Select 'Low Dry' for delicate items such as silk, nylon, linen, etc.

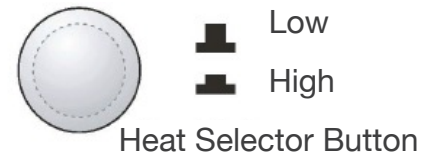


Drying Program Setting

There are five drying combinations available: Cool, Anti-wrinkle, Warm, Hot and Air dry.

Air Dry: This function runs with cool air, primarily to air items that require freshening i.e.: clothes that have been stored for a long period of time.

Cool: This function is generally used to cool items that have just been dried. This helps to prevent creasing. Instead of the motor pushing heat into the drum of the dryer it will generate cool air.

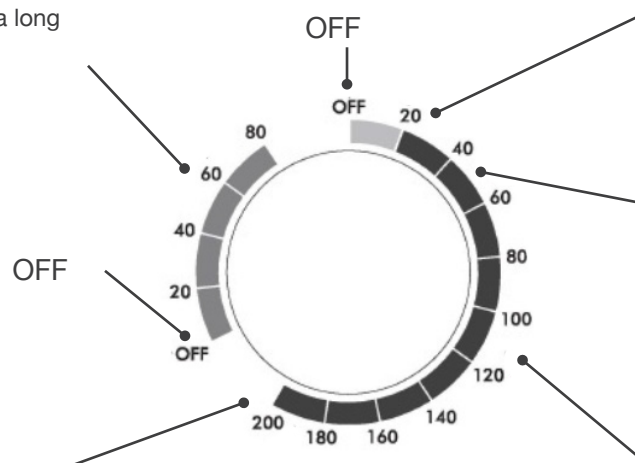

Anti wrinkle: This is used for items that are difficult to iron i.e.: cotton shirts and linen. Using the heat selector dial, choose 'Low'. Set the drying timer dial between 30-60 minutes depending on the number of items in the dryer. Once the timer stops (including the cool program) the items will still contain moisture, making the ironing process easier.

Hot: For drying large quantities or bulky items. Select the 'High' heat option and set the timer for more than 120 minutes.

Warm: This function will dry and cool items and in most cases leave items wrinkle free (depending on material). Select the 'High' heat option and set the timer for 60-120 minutes.

Start Button

After having set up the Heat Setting and Timer Dial, press the Start Button, the dryer will start and work until the programme is finished. If during this process the door is opened or power is switched off, the dryer will stop working. To start the dryer again after the door is closed or the power is switched back on, you will need to push the Start Button and the dryer will restart.



Please Note: The Start Button is only designed to start the dryer. If you press the button during the drying process, the dryer will not pause. To stop the dryer, you must turn the Timer Dial to the 'Off' position.

To ensure you get the most out of the Anti-wrinkle function do not overload the dryer and remove the dried items from the dryer immediately.


The cool down cycle of the tumble dryer should be used to reduce the temperature of the items. They should not be removed from the dryer while hot.

Undergarments that contain metal reinforcements should not be placed in a tumble dryer. Damage to the dryer can result if metal reinforcements come loose during drying.


Delicate items should be placed into a nylon net bag prior to drying.

Do not add items into the tumble dryer whilst it is in operation.

If drying larger items such as a blanket, it is recommended to periodically remove the item and shake it to ensure even drying. Then replace the item and commence drying.

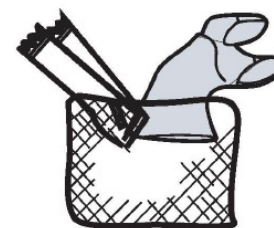

Please Note: After turning off the power supply to the tumble dryer, wait at least 2 minutes before turning it back on again.

 **WARNING!** To minimize the risk of fire in a tumble dryer, the following should be observed:

Items that have been spotted or soaked with oil are a fire hazard and should not be placed in a tumble dryer.

Highly flammable substances commonly used in domestic environments include acetone, denatured alcohol, petrol, kerosene, spot removers (some brands), turpentine, waxes and wax removers should also not be placed in the tumble dryer.

Plastic articles such as shower caps or babies' waterproof napkin covers should not be placed in a laundry dryer. Rubber-backed articles, clothes fitted with foam rubber pads, pillows, galoshes and rubber-coated tennis shoes should not be placed in a laundry dryer.


CLEANING & MAINTENANCE

Cleaning the Lint Filter

Please unplug the power cord prior to any cleaning or maintenance. The lint filter must be in place whenever the appliance is in use, and it must be cleaned before each use.


Removing the filters

Remove the filter by pulling outwards with your fingers inserted into the four holes around the exhaust vent cover. The filter is in 3 parts: Exhaust Vent Cover, Lint Filter, and Exhaust Filter (as shown in figure 1).

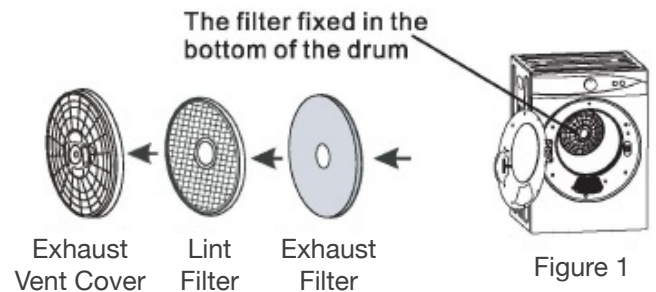

Cleaning the Filter

Separate the 3 parts: Exhaust Vent Cover, Lint Filter, and Exhaust Filter. Clean the Lint Filter and Exhaust Filter with a soft brush or vacuum cleaner (as shown in figure 2). Do not damage the filters.

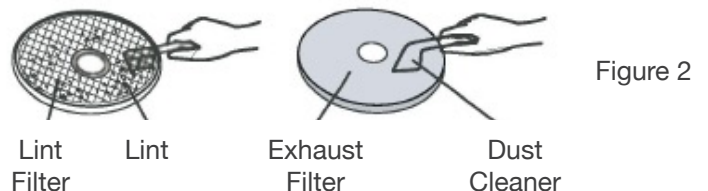


Re-installing the Filter

After cleaning, assemble as shown in figure 3. Exhaust Filter – Lint Filter – Exhaust Vent Cover. Align the recesses in the centre of the drum. Make sure it is firmly inserted.

Please Note: The filter fixed in the bottom of the drum should also be cleaned with a soft brush.

Cleaning the Air Intake Filter

The filter should be cleaned once a month. Remove by pulling the upper and lower end of the air intake cover. Push upwards with your thumb until the latch hook disconnects, then remove. Remove the filter inside the cover and clean with a soft brush. Reassemble and install as before.

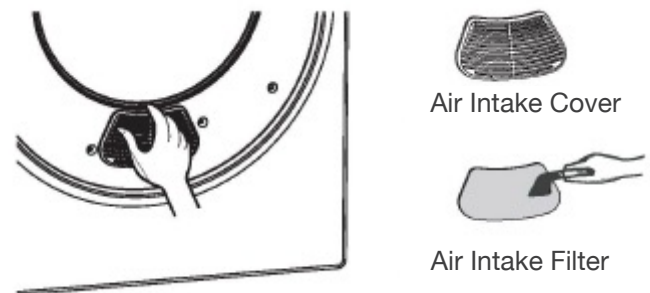

Cleaning The Interior and Exterior Of The Dryer

- Clean with mild soap and water.
Do not use harsh or abrasive cleaners as this could damage the dryer.
- Do not use thinner, petrol or alcohol.
- Do not use any type of spray cleaner when cleaning the interior. If the drum becomes stained, clean the drum with a damp cloth.
- Remove any residue before drying the next load.

TROUBLE SHOOTING GUIDE

If you are having problems with your appliance, please use our Trouble Shooting Guide below. If you are unable to resolve the issue using this guide, please ring our Customer Service Department on 01473 277 508. Please have the model code and purchase information available.

Problem	Solution
Timer Dial does not turn.	<ul style="list-style-type: none">• Check if the power supply works.• Check if the mains plug is inserted.
Drum does not turn.	<ul style="list-style-type: none">• Check the door is closed.• Check if the power supply works.• Check the mains plug is inserted.
Dryer does not start.	<ul style="list-style-type: none">• Connect the tumble dryer to the mains.• Check the door is closed.• Check the timer has been set.• Check the start button has been pressed.
Degree of dryness was not reached.	<ul style="list-style-type: none">• Check and clean the filters.• Check the amount of laundry in the dryer.• Check the laundry has not become twisted.• Check the installation area is appropriate.• Check the setting selected is appropriate for the laundry in the dryer.

MAINS PLUG FUSE REPLACEMENT


Fuse Replacement (Class I)

This appliance must be earthed. Remove the fuse cover with a small flat head screwdriver. Take out the fuse and replace with a new fuse of the same amp. Replace the fuse cover and push back into place.



DISPOSAL INFORMATION

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste.

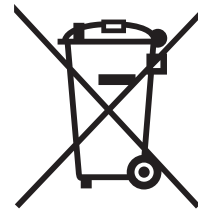

Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.



The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

STATESMAN WARRANTY/GUARANTEE TERMS & CONDITIONS

THANK YOU FOR CHOOSING STATESMAN

As a valued customer we would like to offer you a **FREE 2-year warranty** to cover your product against any electrical or mechanical defects. This means that in the unlikely event you develop a fault or problem with your product we will happily repair or replace the item free of charge. To qualify for the guarantee, the product must be used for domestic household use only and in accordance with the instructions in the user manual. Any misuse of the product will result in the warranty being void. The guarantee does not cover accidental damage, misuse, neglect, tampering or incorrect adjustment or installation. The guarantee will be rendered invalid if the product is resold, has had its serial number or rating label removed (or has an invalid serial number or rating label), or if an unauthorised person has carried out any repairs or alterations.

The warranty does not cover accessories or consumable parts that require replacement under normal use. This includes shelving, dials, filters, belts and trays etc. In the unlikely event of a breakdown please refer to the Troubleshooting Guide in your user manual and check all plugs, fuses and the electricity supply. If you still require assistance, please contact our Customer Service Department on **01473 277 508** or write to us at the following address:

Customer Service Department:

38 Bluestem Road, Ransomes Industrial Estate, Ipswich, IP3 9RR.

Please quote the Product Code and the PO number on the rating label and give details of the exact fault. We will then decide whether to replace the item.

IMPORTANT NOTE: Before we arrange the replacement, you will be required to return a copy of your proof of purchase. Please retain your original receipt.

If an item is replaced within the agreed warranty period, the warranty for the replacement item will be calculated from the purchase date of the original.

If the product is inspected, and no fault is found, or the product is not within the guarantee period you will be charged for the repair and any carriage costs.

STATESMAN
kitchen appliances

**38 Bluestem Road, Ransomes Europark Ipswich, IP3 9RR
EU: Castle Electrical Factors Ltd., Dundalk, A91 KA9R, IR**

01473 277 508