

# STATESMAN

kitchen appliances

---



**TL335LWE**

**60CM TALL LARDER FRIDGE WHITE**

## Instruction Manual

PO Number:

Please read these instructions carefully before use and retain for future reference.  
Before switching on your appliance – always check for any damage that may have been caused in transit.

## CONTENTS

Important Safety Instructions .....	3
Specification.....	4
Appliance Overview.....	5
Installation .....	6-7
Operating Instructions.....	8-9
Cleaning and Maintenance.....	10-11
Trouble Shooting Guide.....	12
Fuse Replacement .....	13
Disposal Information .....	14
Statesman Warranty Information.....	15

# IMPORTANT SAFETY INSTRUCTIONS

**Read and follow all of the instructions even if you feel you are familiar with the product and find a place to keep this manual handy for future reference.**

**Important:** This product is intended for domestic use only, for food refrigeration storage only.

When using electrical appliances, basic safety precautions should always be followed:

- Do not operate the appliance with a damaged cord or plug, after it malfunctions or has been dropped or damaged in any way. All electrical repairs must be carried out by a qualified electrician. Inadequate repairs may result in a major source of danger for the user and invalidate the warranty.
- Check the voltage of the appliance matches the household voltage, which is located on the rating label.
- Use of an extension cord is not recommended with this product.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children.
- Keep the appliance and its cord out of the reach of children.
- Children shall not play with the appliance.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Always unplug the appliance before attempting to move. When disconnecting from the electricity supply, pull the plug and not the cord.
- This product is for indoor use only.
- Do not store explosive substances such as aerosol cans with a flammable propellant, in this appliance.
- Always keep the ventilation openings clear of obstruction. Should they become blocked, clear them straight away.
- The refrigerant of this product is R600a which is flammable. Ensure when moving the appliance or during installation that the cooling system does not get damaged.
- This refrigerating appliance is not intended to be used as a built-in appliance.
- The drawers, baskets and shelves should be kept in their current position unless otherwise specified in this document.

**WARNING:** The appliance is heavy and care is needed when unpacking and moving. Get extra help and only hold the appliance by the casing – never hold by the door or the trim.

**WARNING:** Risk of child entrapment.

Before disposal of the old appliance, make sure that any locking mechanisms have been broken off, doors have been removed but shelves have been left in so that children cannot easily climb inside. Also remove the plug so the appliance is unusable.

# SPECIFICATION

Supplier Name / Trade Mark	Statesman
Model Number	TL335LWE
Category Type	Upright Larder
Energy Efficiency Class	E
Annual Energy Consumption	114kWh/annum
Freezing Capacity	N/A
Fridge Storage Volume (Litre) and Applicable Star Rating Compartment	331L
Freezer Storage Volume (Litre)	N/A
Applicable Star Rating Compartment	N/A
Refrigeration System (Frost Free, Static, Totally No Frost)	Static
Temperature Rise Time	N/A
Climate Class	N/ST
This appliance is intended to be used at an ambient temperature between “16°C” (lowest temperature) and “38°C” highest temperature	
Noise Emission (dB)	40dB
Built-in Appliance	N/A
Wine Storage Appliance	N/A
Voltage (V)	220-240V~
Wattage Power (W)	90W
Frequency (Hz)	50Hz
Power Source	AC

 
The model information can be retrieved using the qr-code on the energy label. The label also includes the model identifier that can be used to consult the portal of the registry at <https://eprel.ec.europa.eu>. The model identifier can also be found on the rating label located inside the cabinet.

## Ambient Room Temperature Limits

Install this appliance at a location where the ambient temperature corresponds to the climate class indicated on the rating label of the appliance:

Class	Symbol	Ambient average temperature °C
Extended temperature	SN	+10 to +32
Temperature	N	+16 to +32
Subtropical	ST	+16 to +38
Tropical	T	+16 to +43

# APPLIANCE OVERVIEW

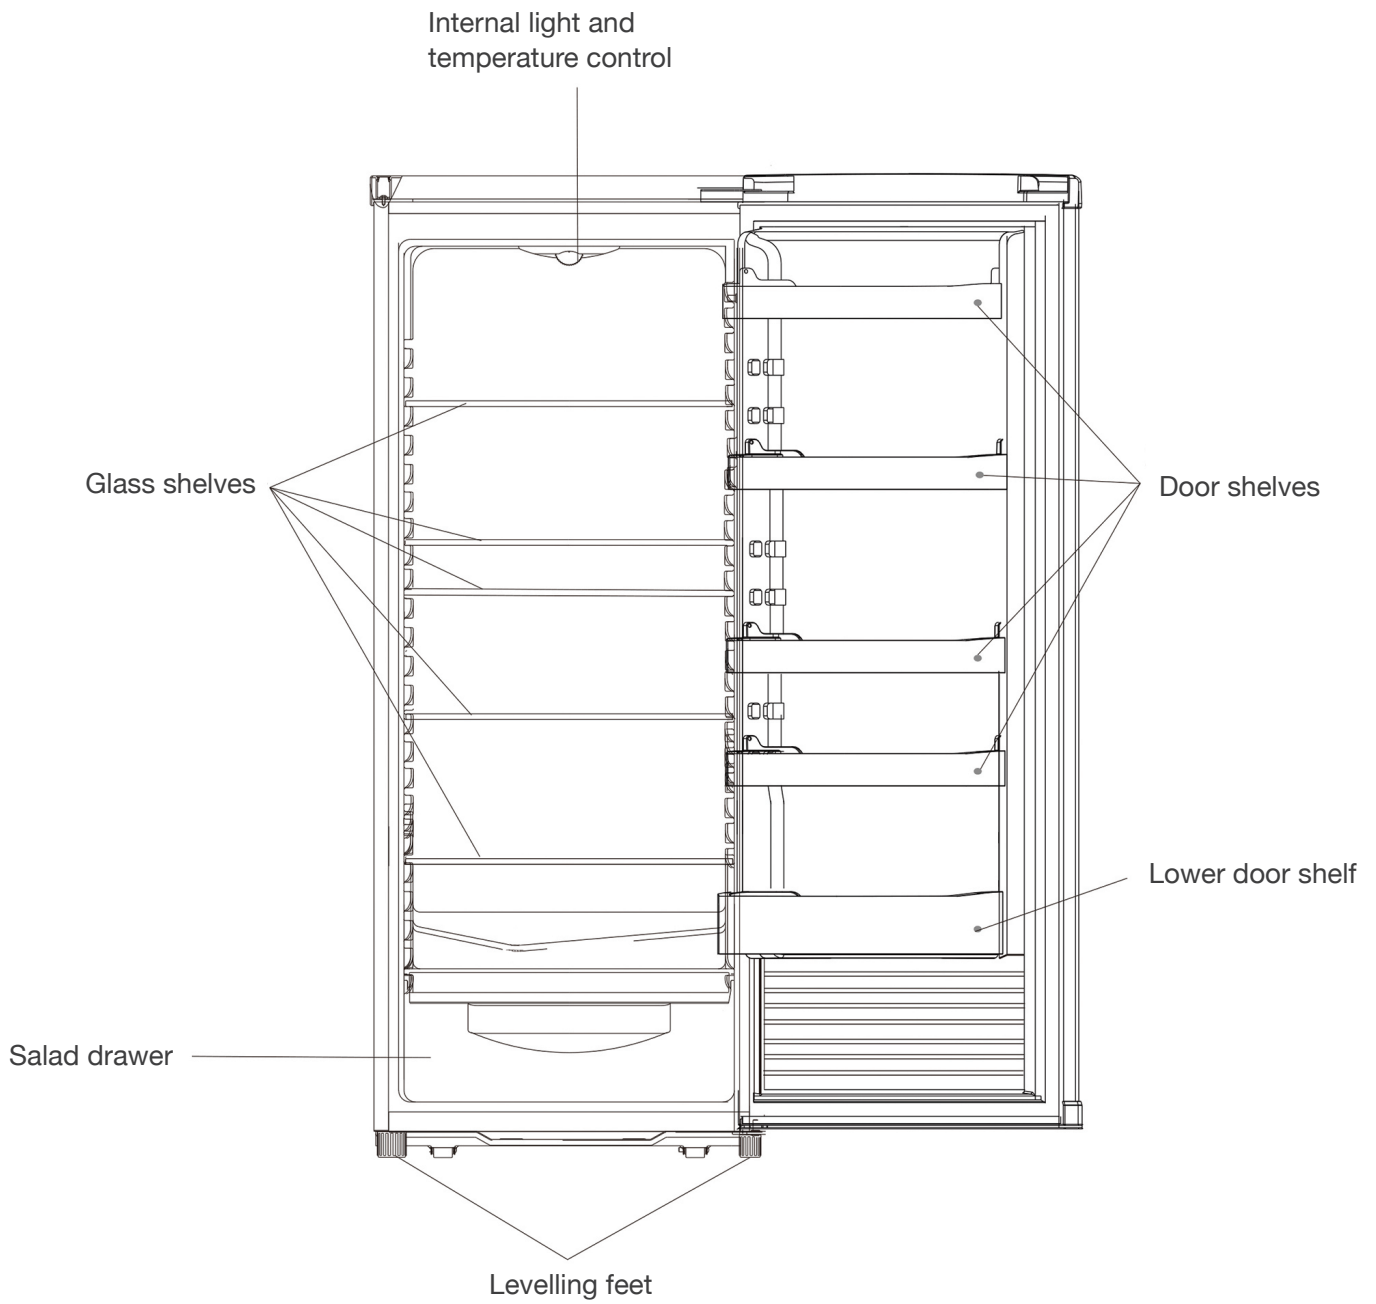

# INSTALLATION

## Location and Air Circulation

- The appliance must stand vertically on a flat, even surface. To level the appliance use the levelling feet by turning them until the appliance is as level as possible.
- It is not recommended to stand this appliance on a carpeted surface.
- This appliance has been designed to operate in ambient temperatures between 16°C and 38°C.
- It is not recommended to place this appliance in a room where the temperature is likely to drop below 10°C.
- The appliance should not be placed near to sources of heat e.g. cookers, radiators, direct sunlight or in any unheated rooms e.g. garages, or outhouses, as extreme temperatures will affect the performance of your appliance.
- Do not expose the appliance to damp conditions, open air or rain.
- Do not lift the appliance by the pipes or the door when moving.
- Never place the appliance in a wall recess, fitted cabinet or furniture as this will not allow adequate ventilation and cause a potential fire hazard. Allow 50mm of clearance space at the sides of the appliance.
- Never push the appliance against the wall.
- If the appliance is positioned below an overhanging wall unit, the minimum distance between the top of the appliance and the wall unit must be at least 100mm.

Providing you follow the recommended ventilation requirements you will:

- Increase the life of the appliance.
- Minimise the risk of condensation on the outside of the appliance.
- Minimise operating noises caused by vibration.

 
 
## Reverse the Door

The appliance door can be fitted to open on either the left or the right depending on its location. The appliance will have to be tilted and supported in order to carry this out. It is advisable to get some help during this procedure.









**WARNING:** Do not lay the appliance flat as this may damage the coolant system. Take care when fitting and tightening screws.

To change the direction of the door, please follow these instructions:

1. Ensure the appliance is unplugged and empty.
2. The top hinge holds the door in place. Unscrew the top hinge cover. (Fig 1.)
3. Open the door and unscrew the top hinge. (Fig 2.)
4. With help, carefully tilt the unit backwards and rest the unit on something solid to stop it slipping.

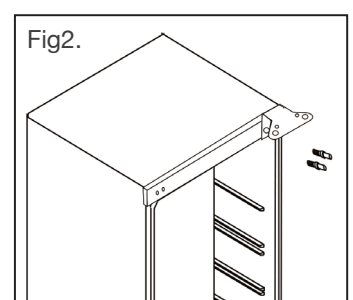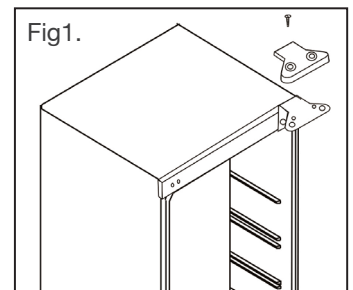

5. Remove the door from the appliance and store in a safe place.
6. Remove the cover and screws on the left side and re-fit on the right side. (Fig 3.)
7. Remove the two levelling feet.
8. Unscrew the bottom hinge and left foot base. (Fig 4.)  
**Caution!** If there is a screw on the left front corner then remove this first before installing the hinge.
9. Unscrew and remove bottom hinge pin, turn the bracket over and replace it. (Fig 5.)
10. Install the hinge on left side and the foot base on the right side.  
Refit the levelling feet with their original parts. (Fig 6.)
11. Unscrew the top hinge pin and re-fit on the left side. (Fig 7.)
12. Stand the appliance up and put the door on the bottom hinge. Make sure the bottom hinge core is inserted into the hole in the door.
13. Re-fit the top hinge onto the door.
14. Check the door is aligned horizontally and vertically and is sealed properly.
15. Tighten the hinge screws.
16. Replace the top hinge cover. (Fig 8.)
17. Screw in the spacer at the rear of the unit. (Fig 9.)
18. Re-adjust the levelling feet at the front to minimise operation noises caused by vibration. If the unit is not levelled, the door and magnetic door seal will not be aligned properly. (Fig 10.)
19. Wait for at least 4 hours before plugging the appliance in.

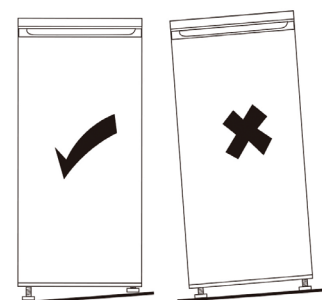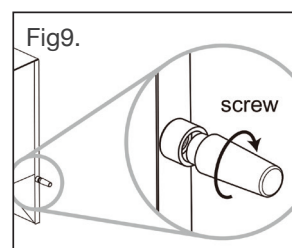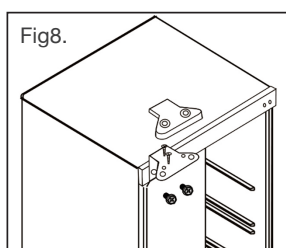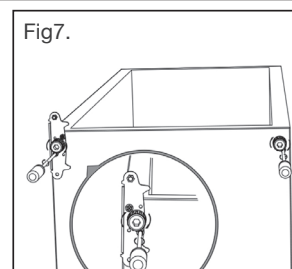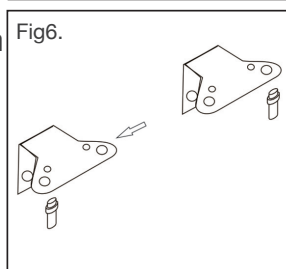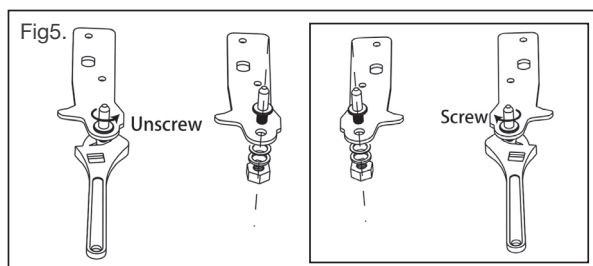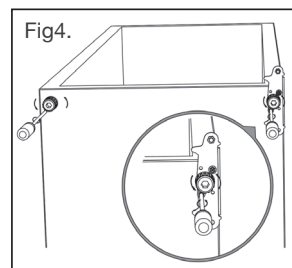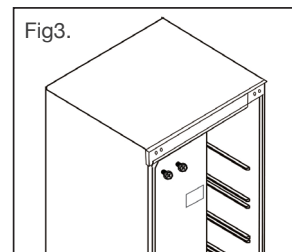        

# OPERATING INSTRUCTIONS

## Before using your Appliance

- Allow 4 hours for the appliance to stand upright before turning on the appliance to allow coolant gases time to settle after the appliance is in place.
- Before placing food in the appliance turn on and wait 24 hours, this is to make sure it is working correctly and also to allow for the optimal internal temperature to be reached.
- The interior of the appliance needs to be cleaned prior to use by wiping with a soft cloth and using warm water. Wipe appliance completely dry before replacing any shelves or salad drawers.

## Using your Appliance




- Once dry, plug the appliance into the electricity supply.
- Adjust the temperature control which is located inside the appliance to setting 4, this is the recommended setting for a room with an average ambient temperature of 20°C.
- Keep the food packed, wrapped or covered.
- For hygiene reasons, always wrap food using a suitable packaging material, before storing in your appliance to avoid contact with the surface of the appliance.
- Do not place food directly against the rear wall.
- This refrigerating appliance is not suitable for freezing foodstuffs.

## Adjusting the Temperature

- The ideal internal temperature of your appliance should be between 0°C to 5°C. This is regulated by the temperature control located internally at the top of the appliance.
- There are 8 settings on the temperature control, with setting 7 being the coldest and setting 1 being the warmest and setting 0 being off.
- The temperature control should be set to setting 4 when operating at normal room temperature (between 16°C and 38°C).
- Avoid setting the temperature control too high, as this may reduce the temperature to a point where some foods begins to freeze. If this happens turn down the temperature control slightly.
- The temperature in the appliances compartment can be monitored by using a fridge thermometer. **DO NOT USE** a Mercury filled thermometer, as a breakage would cause a health hazard.



## Recommended Temperature Settings

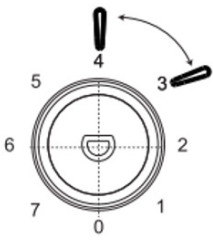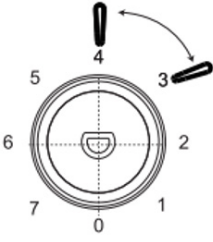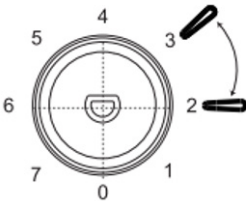Temperature Setting Recommendation		
Environment Temperature	Freezer Compartment	Fridge Compartment
Summer	/	 <p>Set on 3-4</p>
Normal	/	 <p>Set on 3-4</p>
Winter	/	 <p>Set on 2-3</p>

## Impact on Food Storage

- Under the recommended setting, the best storage time in the fridge is no more than 3 days.
- The best storage time may reduce under other settings.
- Load limits are determined by baskets, flaps, drawers, shelves etc. Make sure that these components can still close easily after loading.

The table below contains general guidelines on the storage of food in refrigerated appliances.

Refrigerator Compartments	Type of Food
Door or balconies of fridge compartment.	<ul style="list-style-type: none"> <li>• Foods with natural preservatives, such as jams, juices, drinks, condiments.</li> <li>• Do not store perishable foods.</li> </ul>
Crisper bin (salad drawer).	<ul style="list-style-type: none"> <li>• Fruits, herbs and vegetables should be placed separately in the crisper bin.</li> <li>• Do not store bananas, onions, potatoes or garlic in the refrigerator.</li> </ul>
Fridge shelf - bottom chiller (box/drawer)	<ul style="list-style-type: none"> <li>• Raw meat, poultry, fish (for short term storage).</li> </ul>
Fridge shelf - middle.	<ul style="list-style-type: none"> <li>• Dairy products, eggs.</li> </ul>
Fridge shelf - top.	<ul style="list-style-type: none"> <li>• Foods that do not need cooking, such as ready-to-eat foods, deli meats, leftovers.</li> </ul>

# CLEANING AND MAINTENANCE

Disconnect from the electricity supply before cleaning.

## Interior

- Remove all food from the appliance and cover to help keep cool.
- Remove all the shelves and salad drawer carefully from the appliance and wash in lukewarm water with a soft cloth and dry thoroughly. Never replace the shelves or salad drawer into the appliance if wet.
- Wipe the interior of the appliance with a damp clean cloth.
- Dry the interior thoroughly with a clean cloth and replace the shelves.
- Plug in and switch on and allow the temperature in the appliance to drop back to an adequate temperature.
- Replace the food in the appliance.

**IMPORTANT:** Avoid getting water in the electrical components i.e. the thermostat, as this may damage your appliance.

## Exterior

- Use a clean, damp soft cloth to wipe the exterior surface of the appliance and dry thoroughly.
- Use a vacuum cleaner to remove dust from underneath the appliance and from around the compressor which is situated at the back of the appliance. Do this regularly to maintain adequate ventilation. Use caution not to damage the coolant system.

**IMPORTANT:** Do not use abrasive cloths, powders, household cleaners, bleach or wax polish to clean the appliance as these can leave a smell in the appliance and can damage the exterior.

## Door Seal

Use a clean, damp soft cloth to wipe the door seal and in between the creases, avoid damaging the door seal as this will affect the performance of your appliance.

## Drainage Channel

- The drainage channel must be cleaned regularly to prevent a build-up of impurities; this can be found on the interior back wall of your appliance.
- Use a damp clean cloth and wipe the channel clean, then use a pipe cleaner or similar flexible object to clean the drainage hole to prevent blockages.

## Going Away

If you are going away and do not want to leave the appliance left on, switch off at the socket and remove the plug from the mains sockets ensuring not to pull the cord. Remove any food and follow the cleaning instructions in the “Cleaning and Maintenance” section.

**IMPORTANT:** Leave the door ajar as this will prevent odours and mould accumulating in the appliance and will allow the appliance to dry completely.

### **Power Cut**

In the event of a power cut keep the appliance door closed to maintain the temperature inside.

### **Bulb Replacement**

The internal light is LED, it is advised to contact a qualified technician to replace the bulb.

### **Operating Sounds**

The cooling gas which circulates in the cooling circuit may make a slight noise (bubbling sound) even when the compressor is not running. Do not worry this is quite normal.

If these sounds are different check that:

- The appliance is well levelled
- Nothing is touching the back of the appliance.
- The contents of the appliance is not vibrating.

## TROUBLE SHOOTING GUIDE

 
If you are having problems with your appliance, please use our trouble shooting guide below. If you are unable to resolve the issue using this guide please ring our Customer Service Department on 01473 277 508. Please have the model code and purchase information available.

<b>Fault</b>	<b>Possible cause</b>	<b>Solution</b>
Appliance does not work	Temperature control is set on setting "0".	Set the temperature control to another setting to switch on the appliance.
	Mains plug is not plugged in or is loose.	Insert mains plug.
	Fuse has blown or is defective.	Check fuse, replace if necessary.
	Socket is defective.	Mains malfunctions are to be corrected by an electrician.
The food is too warm.	Temperature is not properly adjusted.	Please look in the Adjusting the Temperature section.
	Door was open for an extended period.	Open the door only as long as necessary.
	A large quantity of warm food was placed in the appliance within the last 24 hours.	Turn the temperature control to a colder setting temporarily.
	The appliance is near a heat source.	Please look in the installation section.
Appliance cools too much	Temperature is set too cold.	Turn the temperature control to a warmer setting temporarily.
Unusual noises	Appliance is not level.	Re-adjust the levelling feet.
	The appliance is touching the wall or other objects.	Move the appliance slightly.
	A component, e.g. a pipe, on the rear of the appliance is touching another part of the appliance or the wall.	If necessary, carefully bend the component out of the way.
Water on the floor	Water drain hole is blocked.	See the Cleaning and Maintenance section.
Side panels are hot.	It's normal. Heat exchange parts are in the sides.	Use gloves to touch sides.

# MAINS PLUG FUSE REPLACEMENT

## Fuse Replacement (Class I)

This appliance must be earthed. Remove the fuse cover with a small flat head screw driver. Take out the fuse and replace with a new fuse of the same Amp. Replace the fuse cover and push back into place.

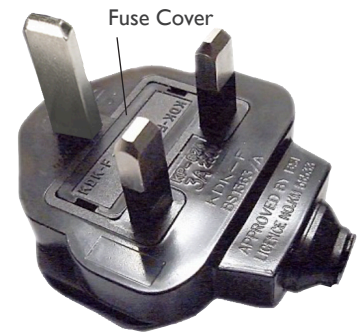

## DISPOSAL

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste.

Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

Doors and lids of the refrigeration appliance should be removed before disposal in the landfill, to avoid children or animals getting trapped inside.



## STATESMAN WARRANTY/GUARANTEE TERMS & CONDITIONS

### THANK YOU FOR CHOOSING STATESMAN

As a valued customer we would like to offer you a **FREE 2-year warranty** to cover your product against any electrical or mechanical defects.

This means that in the unlikely event you develop a fault or problem with your product we will happily repair or replace the item free of charge.

To qualify for the guarantee, the product must be used for domestic household use only and in accordance with the instructions in the user manual. Any misuse of the product will result in the warranty being void.

The guarantee does not cover accidental damage, misuse, neglect, tampering or incorrect adjustment or installation.

The guarantee will be rendered invalid if the product is resold, has had its serial number or rating label removed (or has an invalid serial number or rating label), or if an unauthorised person has carried out any repairs or alterations.

The warranty does not cover accessories or consumable parts that require replacement under normal use. This includes shelving, dials, filters, belts and trays etc.

In the unlikely event of a breakdown please refer to the Troubleshooting Guide in your user manual and check all plugs, fuses and the electricity supply.

If you still require assistance, please contact our Customer Service Department on **01473 277 508** or write to us at the following address:

**Customer Service Department**  
**38 Bluestem Road, Ransomes Industrial Estate, Ipswich, IP3 9RR**

Please quote the Product Code and the PO number on the rating label and give details of the exact fault. We will then decide whether to replace the item.

**IMPORTANT NOTE: Before we arrange the replacement, you will be required to return a copy of your proof of purchase. Please retain your original.**

**If an item is replaced within the agreed warranty period, the warranty for the replacement item will be calculated from the purchase date of the original.**

In the event that the product is inspected, and no fault is found, or the product is not within the guarantee period you will be charged for the repair and any carriage costs.

**STATESMAN**  
kitchen appliances

**38 Bluestem Road, Ransomes Europark, Ipswich, IP3 9RR  
Castle Electrical Factors Ltd., Dundalk, A91 KA9R, IR**

**01473 277 508**